



3 – Tuck and Cut – The film generally bridges the gap when the film has been applied around any raised object. It is very important to avoid heating the film up and forcing the bridged film into the gap. Stretching the film into the gap will put too much stress on the adhesive, and will cause the film to pull away from the edge. Instead, pick the film back up and tuck it firmly into the corner. When cutting the film away, be sure to angle the blade at a 10-degree angle along the edge being cut. This will keep the blade from cutting the body of the vehicle and the raised object. A properly tucked corner makes for a clean, precise cut and avoids overstretching.

\* Common areas to use the tuck and cut technique can be found on molding, door handles and antennae.

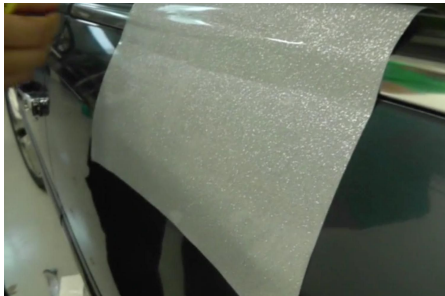

Bridge:

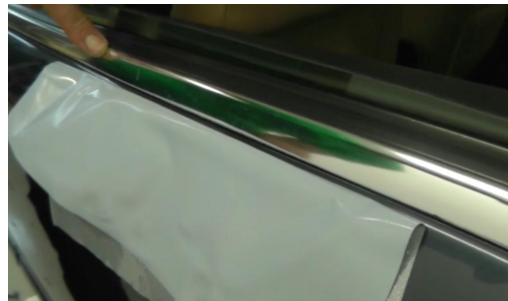


Pull Back:




Tuck:



Setup:

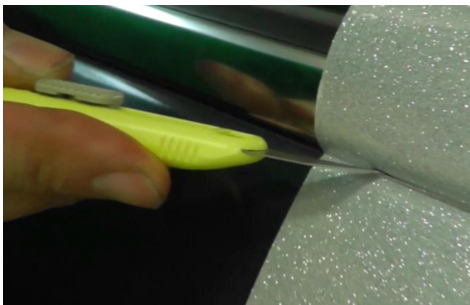

Cut:

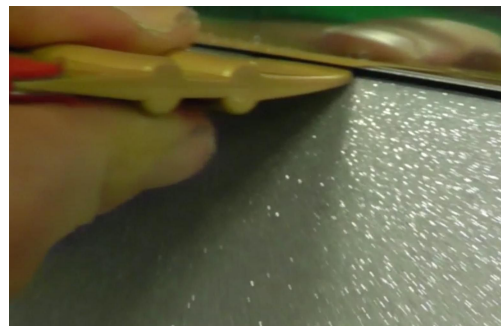

Seal: