
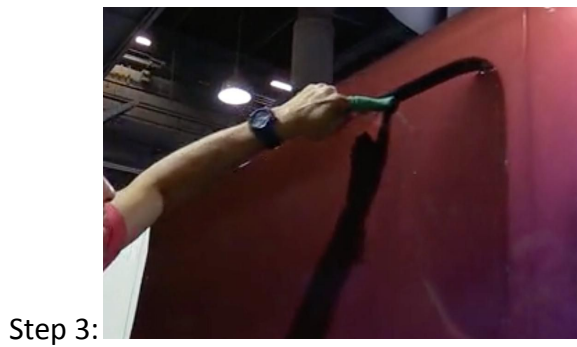


section. The RS feature will hold the film away from the surface and keep it from getting bubbles. Before moving on, go over the recessed area with a heat gun in order to ensure that the adhesive is flowing into the surface.

By applying the film this method, the tension shifts more to the flat area of the enclosed recessed area which helps with long term durability, it keeps the film from whitening/distorting and it avoids adhesive lines.

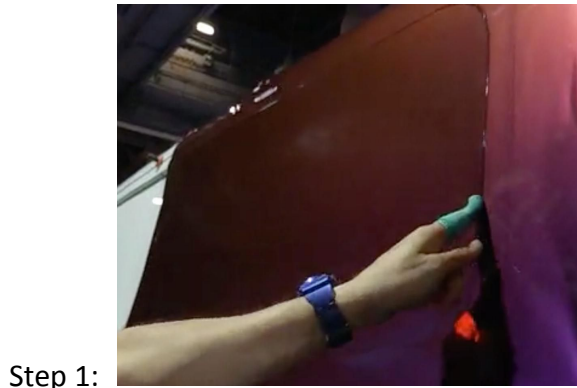

Keep in mind that Avery Dennison MPI 1105 and SW900 should not be post-heated immediately. The installer should wait 30 minutes but no longer than 12 hours after application. This will allow the adhesive layer to settle onto the surface so any air trapped under the film doesn't expand and burst through the film during the post heating process.